

TRANSFER EXPRESS *Application Instructions*

Rhinestone Transfers


For application on cotton, polyester or poly/cotton blends.

1. PREPARE YOUR MACHINE

Allow for warm up time.

Temperature: 325° - For Hotronix®
(Set other machines at 335° or higher)

Pressure: **Med/Firm 6-8**

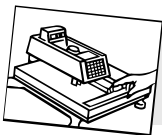

PREHEAT BOTTOM PAD

Before applying, lock the top platen down for 60 seconds.
This helps the ink to flow properly during application.

NOTE: These recommended time, temperature and pressure settings are for Stahls' Hotronix® heat seal machines. Settings on other heat presses may vary based on their inconsistencies.


2. PREHEAT GARMENT

- Place garment on platen
- Press for 3-5 seconds or until there is no more steam to remove wrinkles and moisture.
- Check to be sure there are no obstructions such as buttons, pockets or seams.
If there are, raise the print area only with Print Perfect pad or mouse pad.




3. POSITION

- Remove the transfer from the white backing and position on the shirt.

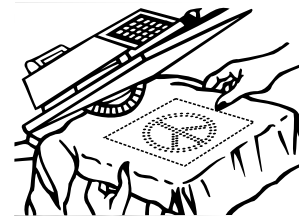

4. PRESS

- Close the machine.
- Press for 10-12 seconds

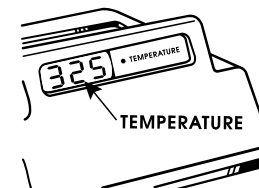

5. PEEL COLD

- Remove garment from press.
- Allow to completely cool.
- Peel off clear carrier.

